


NOTE:

Drill thru outer collar and post wall for bolts. Provide contoured washers and hardened washers under bolt head and nut. Contoured washers to be 3" x 3" x 5/16" Min. Grind face to fit.


1 1/2" Dia HS bolts
total 6 to be snug tight

Galvanizing drain hole.
Drill and tap thru cap plate for 1" Dia A307 bolt, 5/16" clear of inside collar wall. Install bolt after galvanizing.

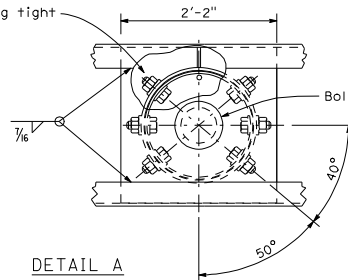

DETAIL A

7" Dia bolt circle
Drill and tap thru cap plate for 1/4" Dia round head brass machine screw 1" long, 4 holes equally spaced

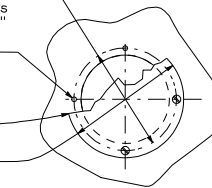

PLAN BOLT-ACCESS HOLE

DIST	COUNTY	ROUTE	POST MILES TOTAL PROJECT	SHEET NO.	TOTAL SHEETS

REGISTERED CIVIL ENGINEER

May 1, 2006
PLANS APPROVAL DATE


Jeffrey B. Moody
No. C41260
Exp. 3-31-07
CIVIL
STATE OF CALIFORNIA

The State of California or its officers or agents shall not be responsible for the accuracy or completeness of electronic copies of this plan sheet.

To get to the Caltrans web site, go to <http://www.dot.ca.gov>

NOTES:

1. Cross ties at vertical and diagonal Ls and internal diagonals not shown for clarity.
2. Interior grating, backside safety cable and backside weld lugs shall be installed only for projects requiring backside walkways.

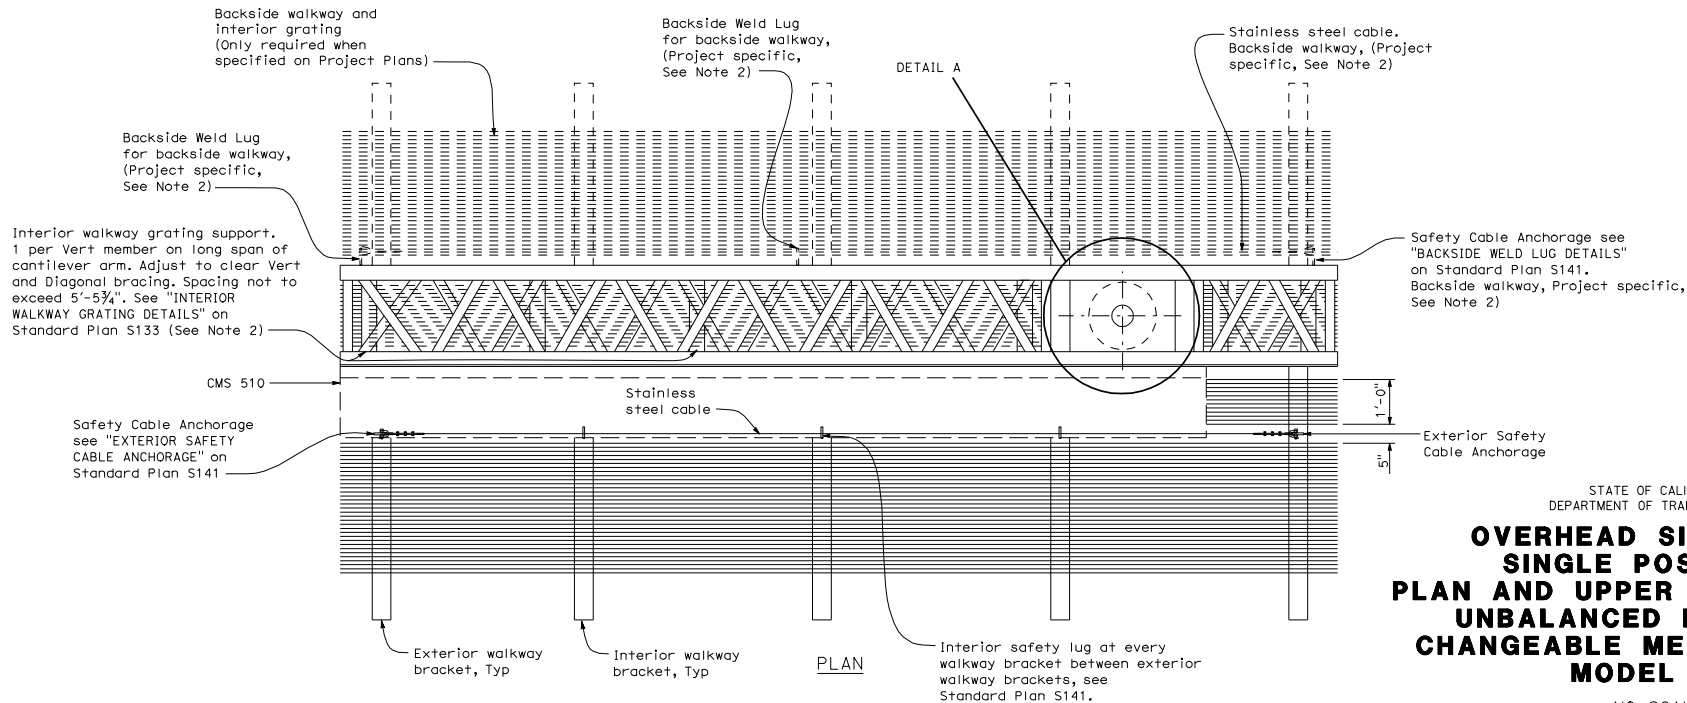

PLAN

**OVERHEAD SIGN-TRUSS
SINGLE POST TYPE
PLAN AND UPPER BOLT DETAILS
UNBALANCED BUTTERFLY
CHANGEABLE MESSAGE SIGNS
MODEL 510**

NO SCALE